


CZ BREN ADAPTER INSTALLATION INSTRUCTIONS						
	PART DESCRIPTION:	CZ BREN ADAPTER	PART #:	F5P0200	DOC #	F5DOC5-007
	AUTHOR	SPENCER GOTTLIEB	DOC REV	00	REV DATE	01/22/21


1. Pull the takedown pin approximately $\frac{1}{2}$ of the way out



2. Press the disassembly tool into the detent release hole.



3. Depress the tool into the hole, removing the tension from the takedown pin.


CZ BREN ADAPTER INSTALLATION INSTRUCTIONS						
	PART DESCRIPTION:	CZ BREN ADAPTER	PART #:	F5P0200	DOC #	F5DOC5-007
	AUTHOR	SPENCER GOTTLIEB	DOC REV	00	REV DATE	01/22/21

- Remove the pin all the way, keeping the tool in the hole.




- Place hand over the bottom of the adapter to capture the detent and spring. remove the tool, allowing the detent to release.
- Place the spring into the same side of the F5 MFG Bren 2 Adapter followed by the detent. Ensure the detent and spring are installed in the orientation shown.



CZ BREN ADAPTER INSTALLATION INSTRUCTIONS						
	PART DESCRIPTION:	CZ BREN ADAPTER	PART #:	F5P0200	DOC #	F5DOC5-007
	AUTHOR	SPENCER GOTTLIEB	DOC REV	00	REV DATE	01/22/21

7. Press the detent below the line shown. Place the takedown pin through the hole in the side and press the pin all the way in.

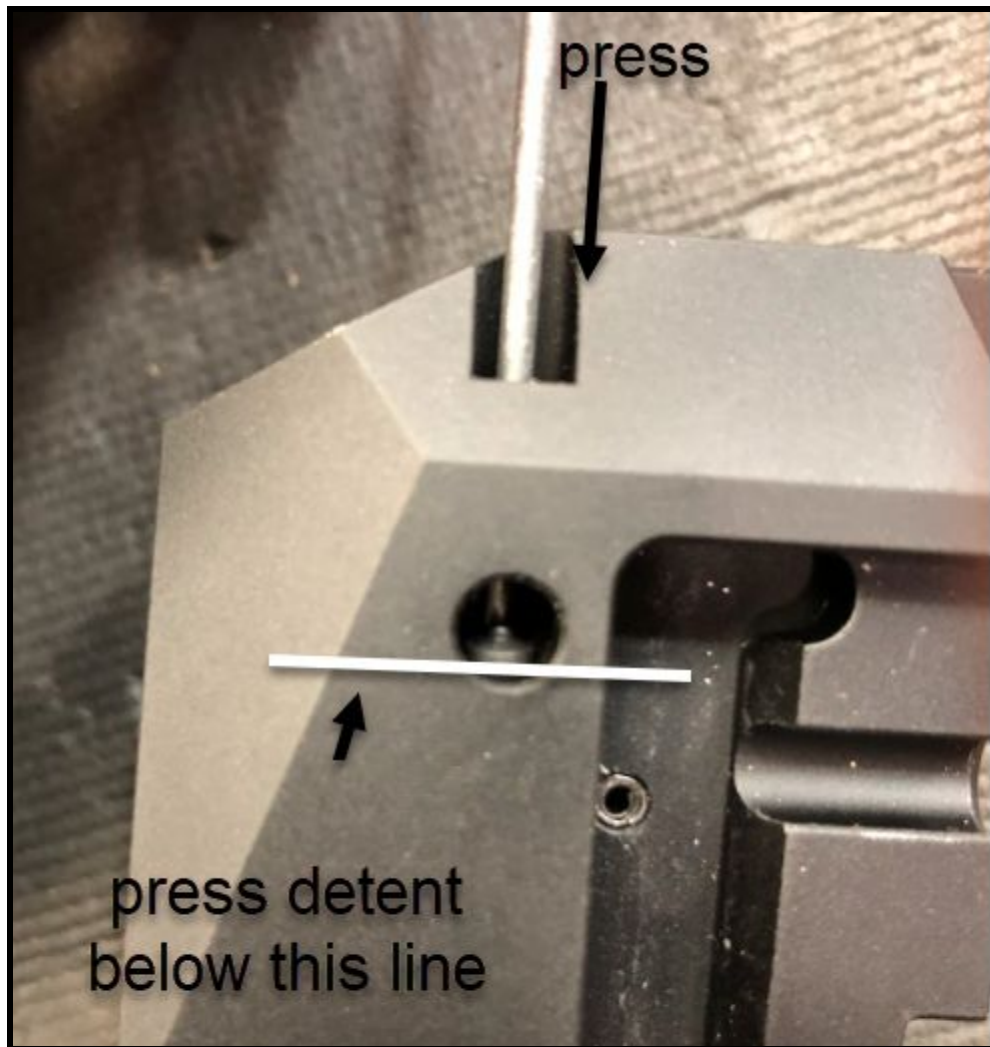

8. Test the function of the takedown pin a few times and ensure that it blocks the function of the spring-loaded lever.